



# Guy Web/ Single Yoke Winch Operating Instructions


1. Insert loose end of web into slot in winch drum and pull one foot of web thru, then rotate drum 1½- 2 times to secure web.

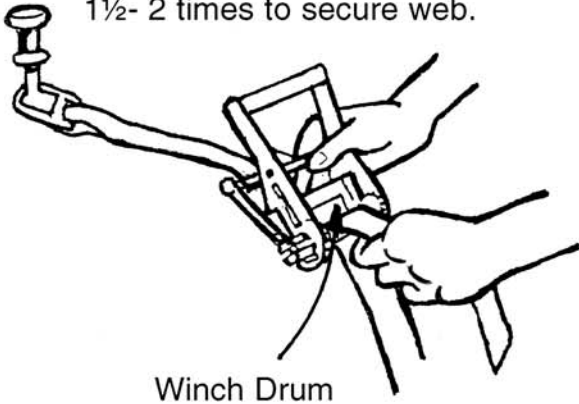

2. Raise poles as directed in product assembly instructions leaving slack in web.

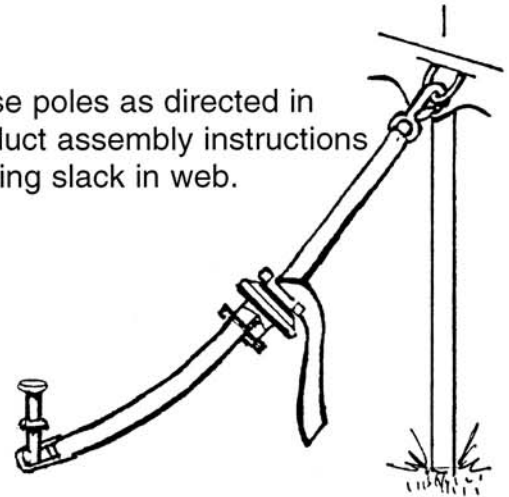

3. When pole is in correct position, release latch and hand pull all slack from web.

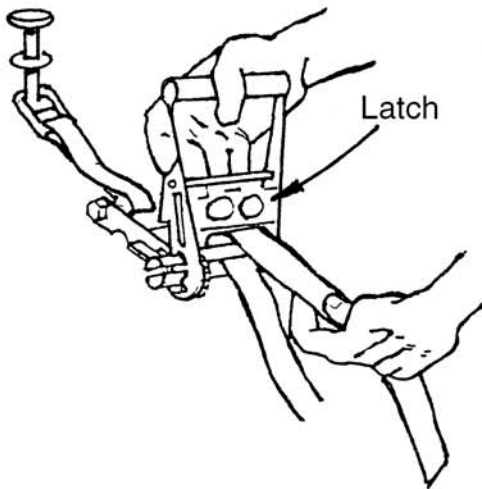

4. Hold loose end of web tight (until web is secure). Insert handle extension on to winch handle. To tension, keep to the side of winch when tensioning.


SEE NOTE #1

**CAUTION:**

Do not overextend the handle. Damage to the ratchet or injury to the user could occur.


**NOTE #1:**

Do not overfill winch drum. Overfilling winch drum will interfere with release mechanism.

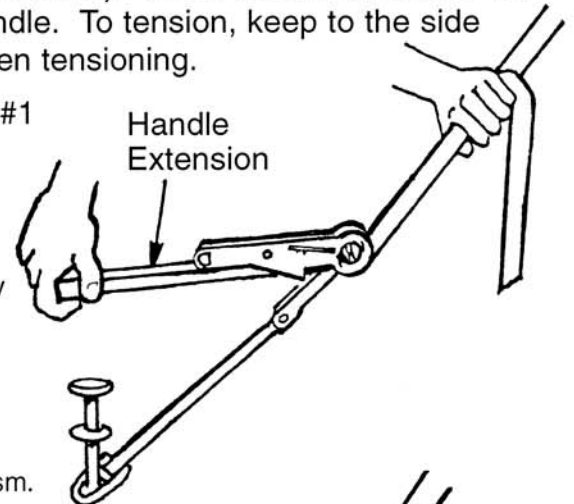

5. When releasing winch, disengage handle release latch and push handle forward until sprocket release latch is disengaged.

**NOTE:** Push handle forward until locked.

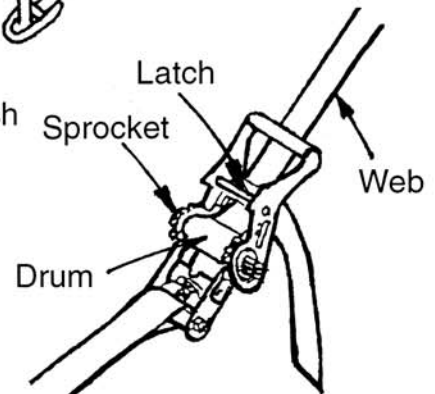

**SEE OVER FOR WARNING.**



**SALES OFFICES:**  
1100 BURCH DR.  
P.O. BOX 3477  
EVANSVILLE, IN 47733 USA

PHONE 812-867-2421  
FAX 812-867-0547  
1-800-544-4445

**PRODUCTION FACILITIES:**  
BRADENTON, FL  
EVANSVILLE, IN



Thank you for purchasing an Anchor product. In return, we pledge Quality, Service and Craftsmanship and are available for any questions you may have or assistance you may need.

### **PHONE NUMBER**

812-867-2421

### **FAX NUMBER**

812-867-0547

Anchor products are of superior design and operate best within the parameters of these instructions. It is **IMPERATIVE** that the instructions be carefully read and **COMPLETELY FOLLOWED**.

### **WARNING**

1. Use for tensioning tent products only.
2. Do not use if webs are worn or threads are broken.
3. Do not over-tension.
4. Follow assembly instructions for safe use.

\* See product assembly instructions for proper tensioning.