
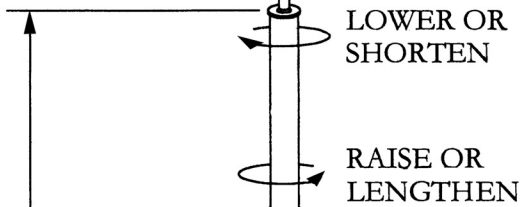


CENTER POLE ADJUSTMENT

Frame Tent System

- Sizes:**
- 10 x 10
 - 15 x 15
 - 20 x 20
 - 30 x 30
 - 10 x 20
 - 20 x 30
 - 5 meters

Fabric should be 2" below horizontal structure at center on all 4 sides.

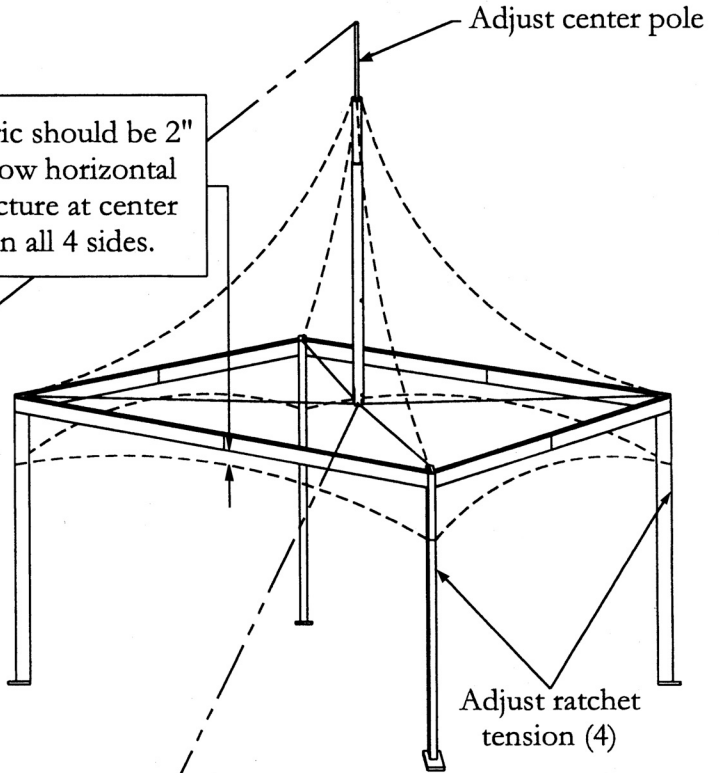

Approximate Factory Pole Length Settings

10' x 10'	61"
15' x 15'	88"
20' x 20'	117"
30' x 30'	171"
10' x 20'	88"
20' x 30'	153"
5 meters	97"

Note: Due to cable tolerances, center pole may require adjustments.

NOTES:

- Your pole has been factory set at the approximate height for your tent size.
- Due to variances in fabric elasticity and cable stretch, you will have to adjust the tension of the center pole and the corner ratchets (4).
- By turning the top portion of the pole you will be able to lengthen or shorten it.

Century
Frame Tent System